

We are IntechOpen, the world's leading publisher of Open Access books Built by scientists, for scientists

6,900

Open access books available

186,000

International authors and editors

200M

Downloads

Our authors are among the

154

Countries delivered to

TOP 1%

most cited scientists

12.2%

Contributors from top 500 universities



WEB OF SCIENCE™

Selection of our books indexed in the Book Citation Index
in Web of Science™ Core Collection (BKCI)

Interested in publishing with us?
Contact book.department@intechopen.com

Numbers displayed above are based on latest data collected.
For more information visit www.intechopen.com



Selection of Voltage Referential from the Power Quality and Apparent Power Points of View

Helmo K. Morales Paredes¹, Sigmar M. Deckmann¹,
Luis C. Pereira da Silva¹ and Fernando P. Marafão²

¹*School of Electrical and Computer Engineering, University of Campinas,*

²*Group of Automation and Integrated Systems, Unesp – Univ Estadual Paulista
Brazil*

1. Introduction

When one tries to go further into the discussions and concepts related to Power Quality, one comes across basic questions about the voltage and current measurements. Such issues do not emerge only because of the evolution of sensors and digital techniques, but mainly because of the need to better understand the phenomena related with three-phase circuits under asymmetrical and/or distorted waveform conditions.

These issues are fundamental, both for establishing disturbance indicators as well as for power components formulation under non sinusoidal and/or asymmetrical waveforms. This can be verified by the various conferences that have been dedicated to this topic and the growing number of articles published about this subject (Depenbrock, 1993; Akagi et al, 1993; Ferrero, 1998; Emanuel, 2004; Czarneck, 2008; IEEE Std 1459, 2010; Tenti et al., 2010; Marafao et al., 2010).

Several discussions have shown that the choice of the voltage reference point can influence the definitions and calculation of different power terms and power factor (Emmanuel, 2003; Willems & Ghijselen, 2003; Willems, 2004; Willems et al., 2005). Consequently, it may influence applications such as revenue metering, power conditioning and power systems design. Taking into account two of the most relevant approaches (Depenbrock, 1993; IEEE Std 1459, 2010), regarding to, e.g., the power factor calculation, it can be seen that quantitative differences are practically irrelevant under normal operating conditions, as discussed and demonstrated in (Moreira et al., 2006). However, under severe voltage and current deterioration, particularly in case of power circuits with a return conductor, the differences may result significant.

Nevertheless, the matter of voltage referential is much more extensive than the definitions or calculations of power terms and it can have a direct effect on many other power system's applications, such as: power quality instrumentation and analysis, protection, power conditioning, etc.

Thus, this chapter deals with the selection of the very basic voltage referential and its influence of the quantification of some power quality indicators, as well as, in terms the apparent power definition.

The analysis of some power quality indices will illustrate how the selection of the voltages referential may influence the evaluation of, e.g., the total harmonic distortion, unbalance

factors and voltage sags and swells, especially in case of three-phase four-wire circuits. Such case deserves special attention, both, from instrumentation and regulation points of view. Finally, based on the classical Blakesley's Theorem, a possible methodology will be presented in order to allow the association of the most common voltage measurement approaches, in such a way that the power quality (PQ) and power components definitions would not be improperly influenced.

2. Choosing the voltage referential in three phase power systems

It is not possible to discuss the choice of a circuit voltage referential, without first recalling Blondel's classic definition (Blondel, 1893), which demonstrates that in a polyphase system with “m” wires between source and load, only “m-1” wattmeters were needed to measure the total power transferred from source to load. In this case, one of the wires should be taken as the referential, be it either a phase or a return (neutral) conductor (Fig. 1).

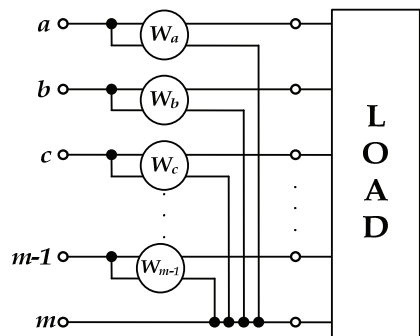


Fig. 1. Illustration of the measuring method according to Blondel

This hypothesis was extended to various other power system applications and it is also currently used, as can be seen, for example, in (IEEE Std 1459, 2010). However, other proposals have also been discussed, such as the utilization of a referential external to the power circuit (Depenbrock, 1993; Willems & Ghijselen, 2003; Blondel, 1893; Marafão, 2004).

2.1 External voltage referential

In this case, all wires, including the neutral (return), should be measured to a common point outside the circuit (floating), as shown in Fig. 2. This common point was designated by Depenbrock as a *virtual reference* or a *virtual star point* (*). In the same way as Blondel's work, the author originally dealt with the problem of choosing the voltage referential from the point of view of power transfer.

In practice, this method requires that an external point (*) be used as the voltage referential. This point can be obtained connecting “m” equal resistances (or sensor's impedances) among each wire on which the voltage should be measured. Voltage drops over these resistors correspond to the voltages that characterize the electromagnetic forces involved. Depenbrock has demonstrated that such measured voltages always sum up to zero, according to Kirchhoff's Voltage Law (Depenbrock, 1998).

Therefore this method is applicable to any number of wires, independently of the type of connection (Y-n, Y ou Δ). It must be emphasized that measured voltages in relation to the virtual point can be interpreted as virtual phase voltages, although they do not necessarily equal the voltages over each branch of a load connected in Y-n, Y or Δ, especially when they

are unbalanced. Thus, the use of voltages in relation to the virtual point needs to be treated in a special way so as to arrive at phase or line quantities, as will be shown further on.

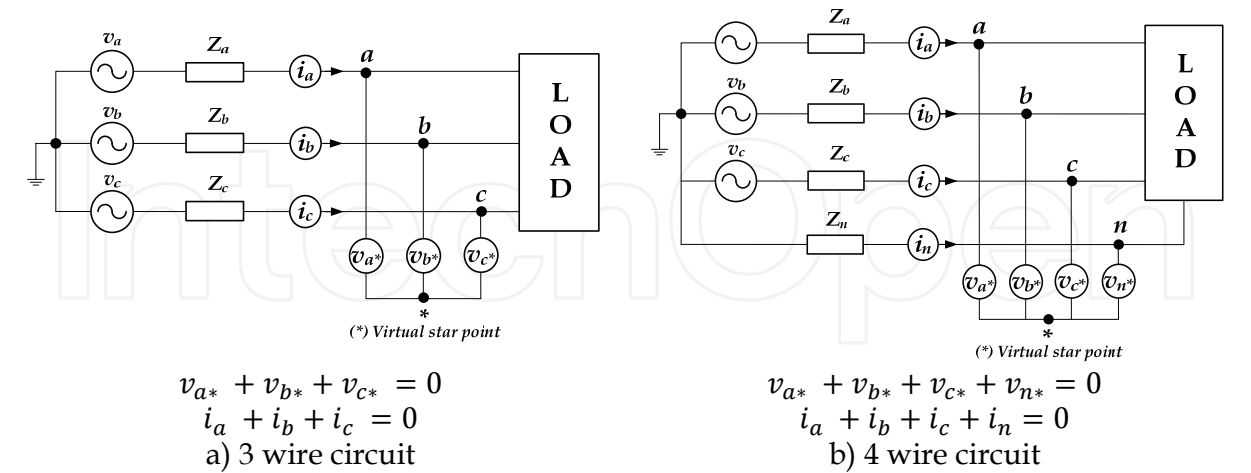


Fig. 2. Voltages measurement considering a virtual star point (*)

2.2 Internal voltage referential

Based on Blondel’s proposals, recent discussions and recommendations made by Standard 1459 (IEEE Std 1459, 2010) suggest that voltage should be measured in relation to one of the system’s wires, resulting in phase to phase voltages (line voltage) or phase to neutral voltages, according to the topology of the system used. In this approach, the number of voltage sensors is smaller than in the case of measurements in relation to a virtual point. Fig. 3 shows a measuring proposal considering one of the system’s conductor as the reference.

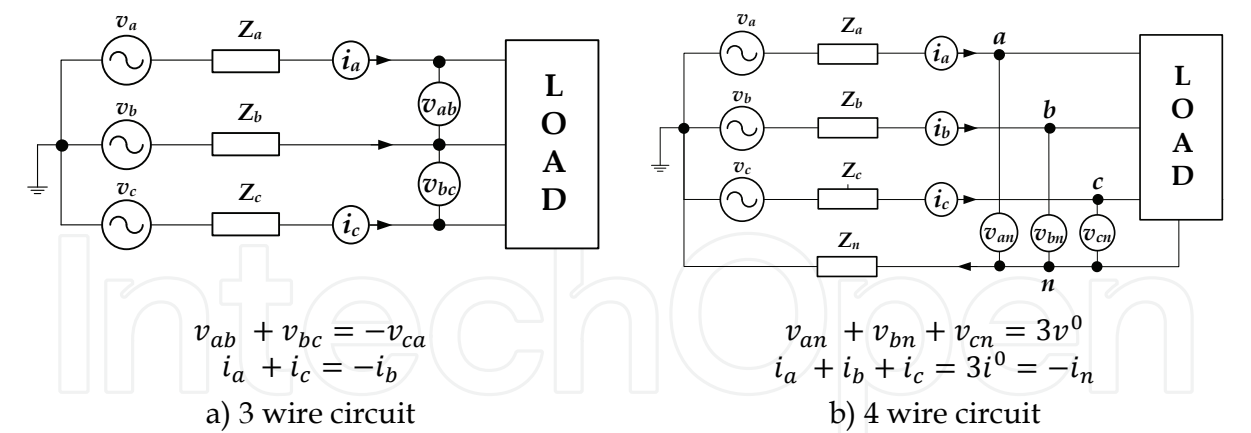


Fig. 3. Voltage measurement considering an internal referential

Note that, in case of 4 wire the phase voltages and currents may not sum zero. Where v^0 and i^0 are the zero sequence voltage and current components.

3. Considerations on three phase power system without return conductor

In this circuit topology, the lack of a return conductor allows either the selection of a virtual reference point (Fig. 2a) or a phase conductor reference (Fig. 3a). Apart from the fact that there is no zero-sequence current circulation, in the three-phase three-wire connection

(system without a return wire), the zero-sequence voltage is also eliminated from the quantities measured between the phases. This is a direct consequence of Kirchhoff's laws. Thus, considering three-wire systems and taking into account different applications, both measuring methods can have advantages and disadvantages. For example:

- With regard to low voltage applications one can conclude that the measurement of line quantities (Fig. 3a) results in the reduction of costs associated to voltage transducers;
- Assuming a common external point (Fig. 2a), the measurements need to be manipulated (adjusted) to obtain line voltages;
- However if we take into account high and medium voltage applications, measurements based on the scheme shown in Fig. 3a may not be the most adequate. Usually at these levels of voltage two methods are employed: the first requires the use of Voltage Transformers (VTs), which have a high cost, since they handle high line voltages. The second strategy, which is cheaper, is to employ capacitive dividers, which, in general, use the physical grounding of the electric system as a measuring reference. The problem is that this type of grounding is the natural circulation path for transient currents, leakage currents, atmospheric discharges, etc. resulting in a system with low protection levels for the measuring equipment;
- Therefore, when considering the previous case (high and medium voltage), the use of a virtual reference point may be a good strategy, since it would guarantee that the equipment is not subjected to disturbances associated to the grounding system. However, this connection with a floating reference point could cause safety problems to the instrument operator, since during transients the voltage of the common point could fluctuate and reach high values in relation to the real earth (operator).

4. Considerations on three phase power system with return conductor

The presence of the return conductor allows the existence of zero-sequence fundamental or harmonic components (homopolars: v^0 and i^0), and in this case, it is extremely important that these components are taken into account during the power quality analyses or even in the calculation of related power terms.

According to Fig. 3b, the reference in the return wire allows the detection of zero-sequence voltage (v^0) by adding up the phase voltages. According to Fig. 2b, the detection of possible homopolar components would be done directly through the fourth transducer to the virtual point (v_{n*}), which represents a common floating point, of which the absolute potential is irrelevant, since only voltage differences are imposed on the three-phase system. In the same way as for three-wire systems, there are some points that should to be discussed in case of four-wire systems:

- Considering the costs associated to transducers, it is clear that the topology suggested in Fig. 3b would be more adequate because of the reduction of one voltage sensor.
- On the other hand, many references propose the measurement of phase voltage (a,b,c,) and also of the neutral (n). The problem in this case is that it is not always clear which is the voltage reference and which is the information contained in such neutral voltage measurements. Usually phase voltages are considered in relation to the neutral wire and neutral voltage is measured in relation to earth or a common floating point (*). This cannot provide the same results. In order to attend the Kirchhoff's Law, the sum of the measured voltages must be zero, which can only happen when voltages are measured in relation to the same potential.

- Comparing the equations related to Figs. 2b and 3b, we would still ask: what is the relationship between $v_{n*} \in 3v^0$, since the voltages measured in relation to the virtual point are different from those measured in relation to the neutral conductor? Therefore, taking into account these two topologies, it is essential the discussion about the impact of the voltage's referential on the assessment of homopolar components (zero-sequence), as well as on the RMS value calculation or during short-duration voltage variations. As will be shown, the measured voltages in relation to an external point has its homopolar components (fundamental or harmonic) attenuated by a factor of $1/m$ (m = number of wires), which has direct impact on the several power quality indicators.

5. Apparent power definitions using different voltage referential

To analyze the influence of the voltage referential for apparent power and power factor calculations, two different apparent power proposals have been considered: the FBD Theory and the IEEE Std 1459. The following sections bring a briefly overview of such proposals.

5.1 Fryze-Buchholz-Depenbrock power theory (FBD-Theory)

The FBD-Theory collects the contribution of three authors (Fryze, 1932; Buchholz, 1950; Depenbrock, 1993) and it was proposed by Prof. Depenbrock (Depenbrock, 1962, 1979), who extended the Fryze's concepts of active and non active power and current terms to polyphase systems. At the same time, Depenbrock exploited some of the definitions of apparent power and collective quantities which were originally elaborated by Buchholz.

The FBD-Theory can be applied in any multiphase power circuit, which can be represented by an uniform circuit on which none of the conductors is treated as an especial conductor. In this uniform circuit, the voltages in the m -terminals are referred to a virtual star point " $*$ ". The single requirement is that Kirchhoff's laws must be valid for the voltages and currents at the terminals (Depenbrock, 1998).

Considering the three-phase four-wire systems (Fig. 2b), the collective instantaneous voltage and current have been defined as:

$$\begin{aligned} v_{\Sigma}(t) &= \sqrt{v_{a*}^2 + v_{b*}^2 + v_{c*}^2 + v_{n*}^2} \\ i_{\Sigma}(t) &= \sqrt{i_a^2 + i_b^2 + i_c^2 + i_n^2} \end{aligned} \quad (1)$$

Thus leading straight to the collective RMS voltage and current

$$\begin{aligned} V_{\Sigma} &= \sqrt{V_{a*}^2 + V_{b*}^2 + V_{c*}^2 + V_{n*}^2} \\ I_{\Sigma} &= \sqrt{I_a^2 + I_b^2 + I_c^2 + I_n^2} \end{aligned} \quad (2)$$

Differently from conventional definitions of apparent power, the Collective Apparent Power has been defined as:

$$S_{\Sigma} = V_{\Sigma} I_{\Sigma} = \sqrt{V_{a*}^2 + V_{b*}^2 + V_{c*}^2 + V_{n*}^2} \sqrt{I_a^2 + I_b^2 + I_c^2 + I_n^2} \quad (3)$$

Considering the existing asymmetries in real three-phase systems and the high current level which can circulate through the return conductor (when it is available), this definition also takes into account the losses in this path, which is not common in many other definitions of apparent power. According to various authors, this definition is the most rigorously presented up to that time, since it takes into account all the power phenomena which take place in relation to currents and voltages in the electric system (losses, energy transfer, oscillations, etc.).

The (collective) active power was given by:

$$P_{\Sigma} = \frac{1}{T} \int_0^T (v_{a*}i_a + v_{b*}i_b + v_{c*}i_c + v_{n*}i_n) dt \quad (4)$$

For three-wire systems (Fig. 2a) $I_n = 0$ and $V_{n*} = 0$ the expressions (3) and (4) become:

$$S_{\Sigma} = V_{\Sigma} I_{\Sigma} = \sqrt{V_{a*}^2 + V_{b*}^2 + V_{c*}^2} \sqrt{I_a^2 + I_b^2 + I_c^2} \quad (5)$$

and

$$P_{\Sigma} = \frac{1}{T} \int_0^T (v_{a*}i_a + v_{b*}i_b + v_{c*}i_c) dt \quad (6)$$

The collective active power has the same meaning and becomes identical to the conventional active (average) power (P), for both three- or four-wire systems, as indicated in (4) and (6).

Finally the collective power factor has been defined as:

$$\lambda_{\Sigma} = \frac{P_{\Sigma}}{S_{\Sigma}} \quad (7)$$

And it represents the overall behavior (or efficiency) of the polyphase power circuit.

5.2 IEEE Standard 1459

One of the main contributions of STD 1459 is the recommendation of the use of "equivalent" voltage and current for three-phase three- and four-wire systems (Emanuel, 2004; IEEE Std 1459, 2010). These values are based on a model of a balanced equivalent electric system, which should have exactly the same losses and/or use of power as the real unbalanced system (Emanuel, 2004; IEEE Std 1459, 2010).

Considering a three-phase four-wire system, the STD 1459 recommends using the values of the equivalent or effective voltage and current as:

$$V_e = \sqrt{\frac{3(V_{an}^2 + V_{bn}^2 + V_{cn}^2) + V_{ab}^2 + V_{bc}^2 + V_{ca}^2}{18}} \quad (8)$$

$$I_e = \sqrt{\frac{I_a^2 + I_b^2 + I_c^2 + I_n^2}{3}}$$

The voltage and current equivalent variables were initially defined by Buchholz and Goodhue (Emmanuel, 1998) in a similar formula and as an alternative way by Depenbrock

(2). Note that the effective current depends on all line and return currents and the effective voltage represents an equivalent phase voltage, which is based on all phase-to-neutral and line voltages.

Thus, the Effective Apparent Power has been defined as:

$$S_e = 3V_e I_e = 3 \sqrt{\frac{3(V_{an}^2 + V_{bn}^2 + V_{cn}^2) + V_{ab}^2 + V_{bc}^2 + V_{ca}^2}{18}} \sqrt{\frac{I_a^2 + I_b^2 + I_c^2 + I_n^2}{3}} \quad (9)$$

This effective apparent power represents the maximum active power which can be transmitted through the three-phase system, for a balanced three-phase load, supplied by an effective voltage (V_e), keeping the losses constant in the line.

And the active power is:

$$P = \frac{1}{T} \int_0^T (v_{an}i_a + v_{bn}i_b + v_{cn}i_c) dt \quad (10)$$

For three-wire systems $I_n = 0$. Then, considering only the line voltages the STD 1459 suggests using the following equation for the effective apparent power:

$$S_e = 3V_e I_e = 3 \sqrt{\frac{V_{ab}^2 + V_{bc}^2 + V_{ca}^2}{9}} \sqrt{\frac{I_a^2 + I_b^2 + I_c^2}{3}} \quad (11)$$

and

$$P = \frac{1}{T} \int_0^T (v_{ab}i_a + v_{cb}i_c) dt \quad (12)$$

Consequently, the Effective Power Factor has been defined as:

$$PF_e = \frac{P}{S_e} \quad (13)$$

Equation (13) represents the relationship between the real power to a maximum power which could be transmitted whilst keeping constant the power losses in the line. In the same way as in (7), the effective power factor indicates the efficiency of the overall polyphase power circuit.

5.3 Comparison between the FBD and IEEE STD 1459 power concepts

Accordingly to the previous equations and based on the Blondel theorem (Blondel, 1893), it is possible to conclude that the active power definitions from FBD or STD do not depend on the voltage referential, which could be arbitrary at this point. It means that:

$$P_\Sigma = \frac{1}{T} \int_0^T (v_{a*}i_a + v_{b*}i_b + v_{c*}i_c + v_{n*}i_n) dt = \frac{1}{T} \int_0^T (v_{an}i_a + v_{bn}i_b + v_{cn}i_c) dt = P \quad (14)$$

Considering the analyses of the collective and effective currents and voltages by means of symmetrical components, the following relations could be extracted from (Willems et al. 2005):

$$I_{\Sigma} = \sqrt{3}I_e = \sqrt{(I^+)^2 + (I^-)^2 + 4(I^0)^2} \quad (15)$$

where the positive sequence, negative sequence and zero-sequence components are indicated by the subscripts +, - and 0, respectively.

Moreover, in case of unbalanced three phase sinusoidal situation, the collective RMS values of the voltage (FBD) can also be expressed by means of the sequence components, such as:

$$V_{\Sigma} = \sqrt{(V^+)^2 + (V^-)^2 + \frac{1}{4}(V^0)^2} \quad (16)$$

Now, assuming the equivalent voltage from the STD:

$$V_e = \sqrt{(V^+)^2 + (V^-)^2 + \frac{1}{2}(V^0)^2} \quad (17)$$

It is possible to observe that the equivalent and collective currents match for both proposals, except for the factor $\sqrt{3}$, which indicates the difference between the single and three-phase equivalent models of the STD and FBD, respectively. However, from (16) and (17) one can notice that the equivalent voltages differ for these two proposals.

Consequently, the choice of the voltage referential affects the zero-sequence components calculation and therefore, it affects the effective and collective voltages definitions, as well as the apparent power and power factor calculations in both analyzed proposals.

Next sections will illustrate the influence of the voltage referential in terms of several power quality indicators.

6. The influence of the voltage referential on power quality analyses

In this section, several simulations will be presented and discussed considering three-phase three- and four-wire systems. The main goal is to focus on the effect of different voltage referentials (return conductor or virtual star point) on the analyses of some Power Quality (PQ) Indicators. The resulting voltage measurements and PQ indicators using both voltage referentials will be also compared to the voltages at the load terminals. The main disturbances considered in the analysis are: harmonic distortions, voltage unbalances and voltage sag.

The analyses of such disturbance can be exploited in terms of the following indicators:

- RMS value:

$$V = \sqrt{\frac{1}{T} \int_0^T v^2(t) dt} \quad (18)$$

- Total Harmonic Distortion (THD_V):

$$THD_V = \sqrt{\frac{\sum_{k=2}^{\infty} V_k^2}{V_1^2}} \quad (19)$$

- Voltage Unbalance Factors:

$$\begin{aligned} K^- &= \frac{V^-}{V^+} \\ K^0 &= \frac{V^0}{V^+} \end{aligned} \quad (20)$$

In the first case, events in the voltage source are generated to quantify the impact of the voltage reference on the occurrence of voltage sags. In the second case, distortions are generated in the voltage source by injecting odd harmonics up to the fifth order with amplitudes of 50% of the fundamental. In the third case, imbalances are imposed through the voltage source, generating negative- and zero-sequence components.

6.1 Three phase power system without return conductor

Considering the line quantities estimation (load in delta configuration) and assuming the voltage measurements referred to a virtual point, an adaptation of the algorithm is necessary since these voltages are virtual phase voltages, and the line voltages can be expressed as:

$$\begin{aligned} v_{a*} - v_{b*} &= v_{ab} \\ v_{b*} - v_{c*} &= v_{bc} \\ v_{c*} - v_{a*} &= v_{ca} \end{aligned} \quad (21)$$

and the RMS values are:

$$\begin{aligned} V_{ab} &= \frac{1}{T} \int_0^T (v_{a*} - v_{b*}) dt \\ V_{bc} &= \frac{1}{T} \int_0^T (v_{b*} - v_{c*}) dt \\ V_{ca} &= \frac{1}{T} \int_0^T (v_{c*} - v_{a*}) dt \end{aligned} \quad (22)$$

In the case of an under-voltage event, Fig. 4 shows that both measuring methods adequately represent the impact effectively experienced by load (superimposed curves), either in terms of their magnitude or duration of the voltage sag. On the other hand, Fig. 5 shows that both measuring topologies being discussed are equivalent with regard to the measuring of harmonic components, thus representing their impact on the loads (superimposed spectra).

To assess the performance of both methodologies with regard to the unbalance factors, the three-phase source was defined with amplitude and phase angle as indicated in Table 1.

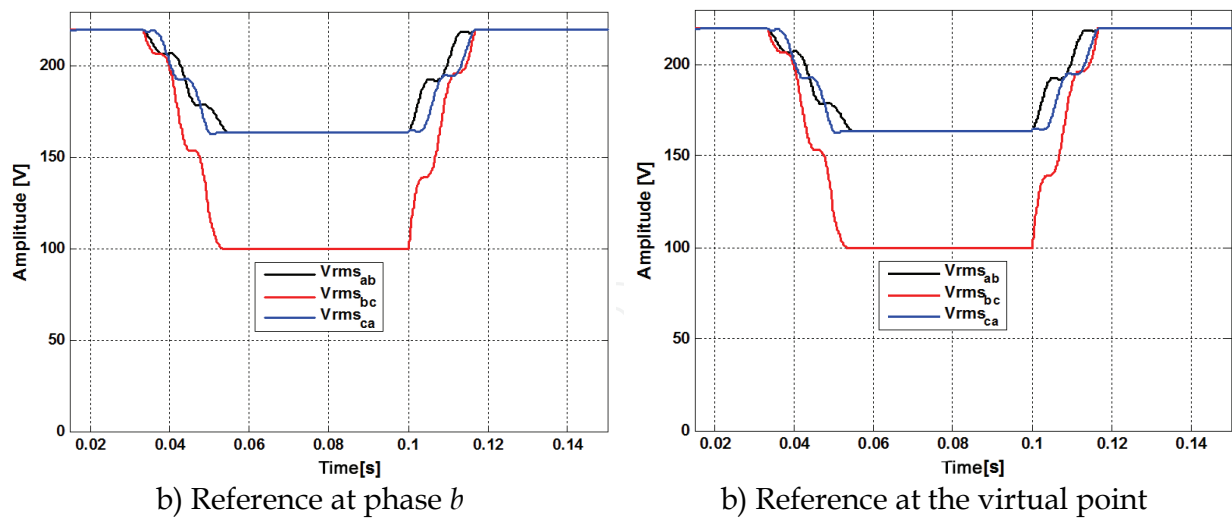


Fig. 4. Evolution RMS values during voltage sag between phases *b* and *c* from 220V to 100V (4 cycles).

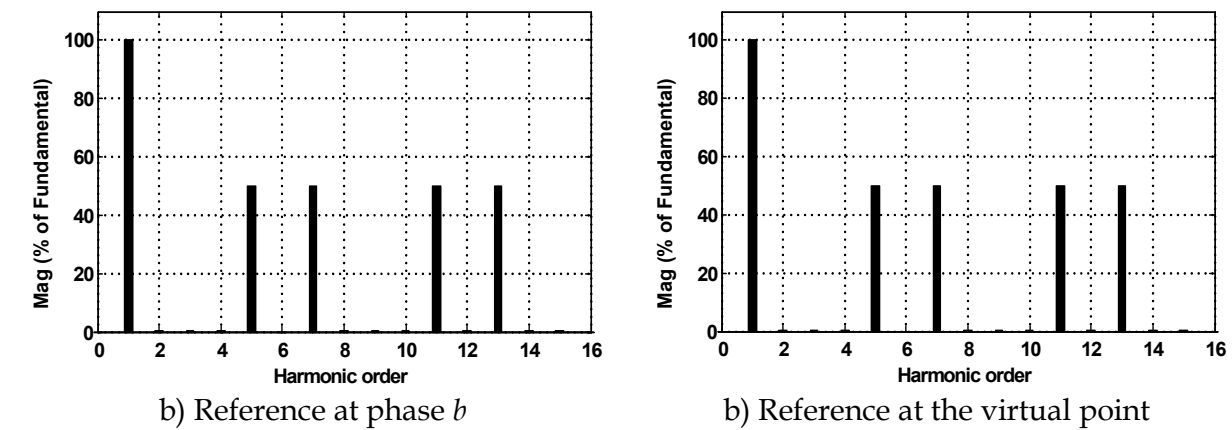


Fig. 5. Spectral analysis with each measuring topology (3 wires)

	Test 1		Test 2	
Source Voltage	Amplitude	Angle	Amplitude	Angle
v_a	179.61 V	0°	179.61 V	0°
v_b	159.81 V	-104.4°	159.81 V	-104.4°
v_c	208.59 V	132.1°	208.59 V	144°
	Test 3		Test 4	
	Amplitude	Angle	Amplitude	Angle
v_a	197.57 V	0°	197.57 V	0°
v_b	171.34 V	-125.21°	171.34 V	-114.79°
v_c	171.34 V	125.21°	171.34 V	114.79°

Table 1. Voltages and phase angles programmed at the power source

In this case the negative-sequence unbalance factor (K^-) is identical for both measuring methodologies (vide table 2), which also coincides with the theoretical value and the

measurements at the load terminals. As it was expected, the zero-sequence unbalance factor (K^0) is nil due to the lack of a return conductor.

Test	Theoretical Value		Reference at phase <i>b</i>		Reference at the virtual Point		Measurement at load terminals	
	K - (%)	K ⁰ (%)	K - (%)	K ⁰ (%)	K - (%)	K ⁰ (%)	K - (%)	K ⁰ (%)
1	15.92	0.00	15.92	0.00	15.92	0.00	15.92	0.00
2	19.49	0.00	19.49	0.00	19.49	0.00	19.49	0.00
3	10.00	0.00	10.00	0.00	10.00	0.00	10.00	0.00
4	0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00

Table 2. Unbalance factor calculated according to each measurement method

6.2 Three phase power system with return conductor

Fig. 6a shows that the voltage measurement using the return wire as the reference, correctly detects the presence of odd harmonics, with 50% amplitudes. Therefore, it is in this scenery that the real impact on the load Fig. 6 is being quantified. Note that when the virtual point is used as voltage reference (Fig. 6b) the harmonics multiples of 3 are not correctly detected. These homopolar components are attenuated by a factor of ¼ in relation to the expected voltage spectrum on the load. The other harmonic components do not suffer attenuation, because they either are of positive- or negative-sequence.

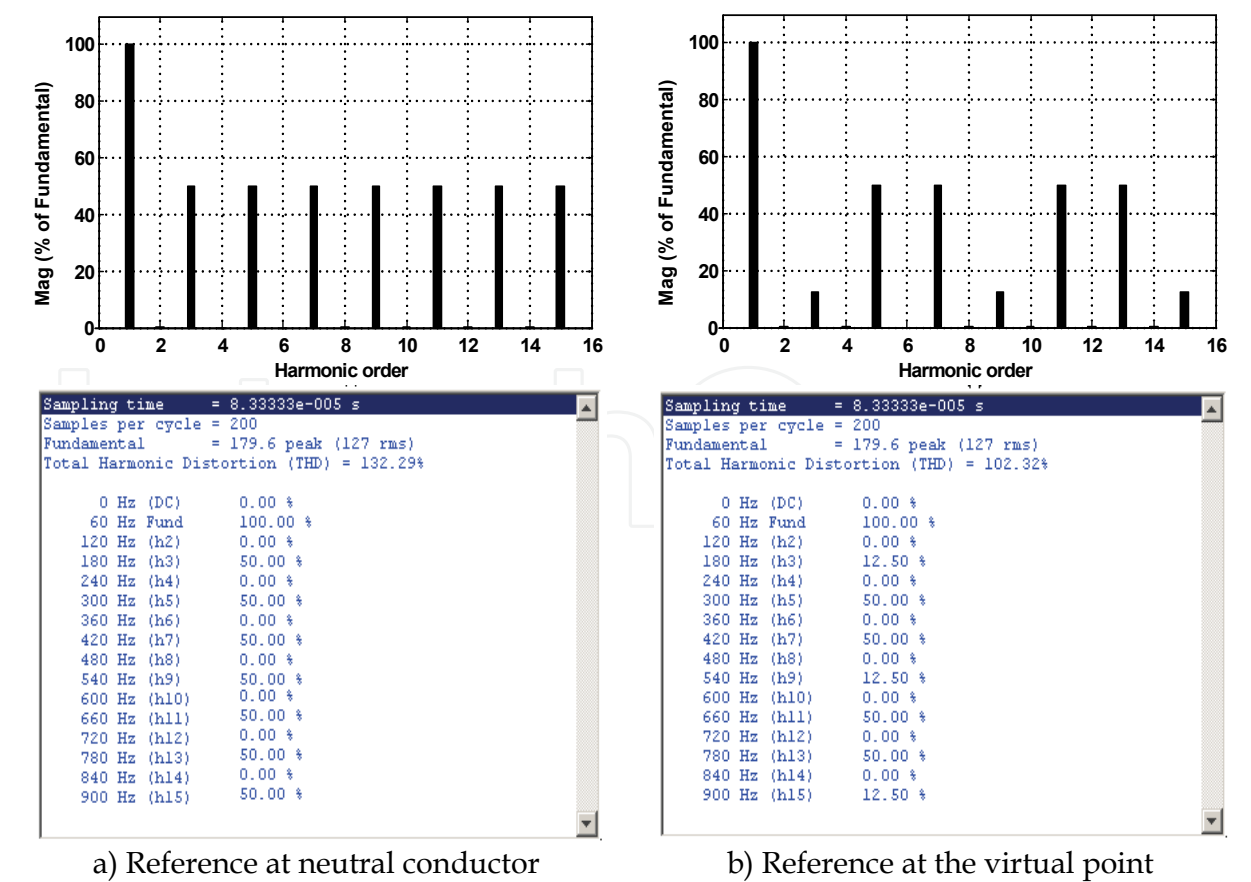


Fig. 6. Spectrum analysis with each measuring topology (4 wires)

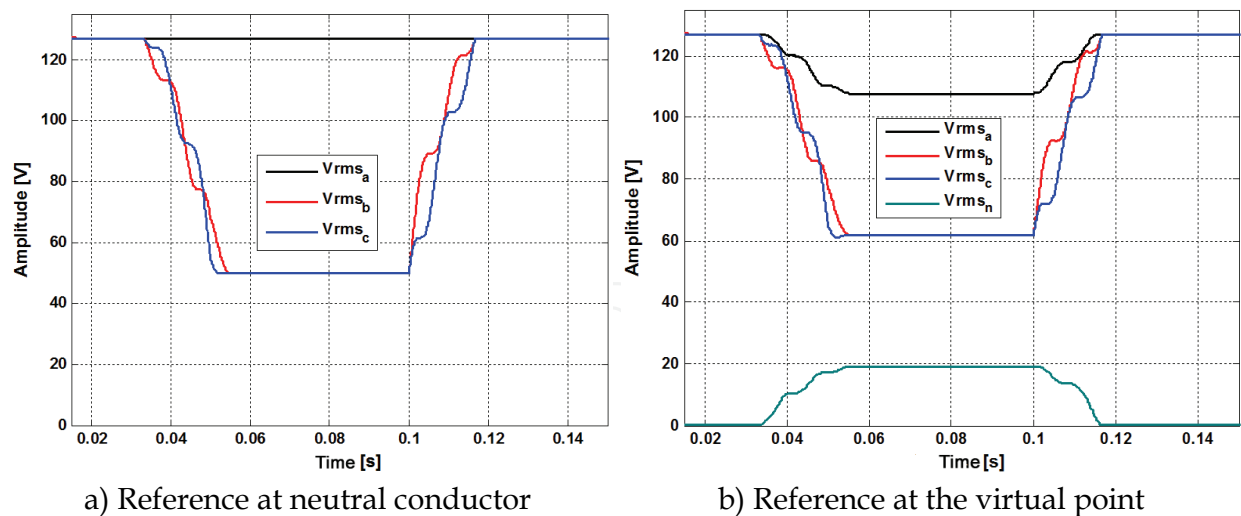


Fig. 7. Evolution of RMS values during a voltage sag between phases *b* and *c* from 127V to 50V (4 cycles)

Fig. 7a shows when the reference is set in the return conductor the event is correctly detected and quantified (amplitude and duration) in all phases, thus representing the exact impact on the load. However with the use of a virtual point as the voltage reference the event is detected, but it does not show how it is generated or how it could affect the load (Fig. 7b). Thus, this measuring method affects the assessment of the impact during voltage sag.

According to Table 3 both the voltage reference on the return wire and on the virtual point detected equal imbalances for the negative component (K^-). However, the zero-sequence indicator (K^0), calculated by means of the virtual reference point voltages is different from expected. It is attenuated by a factor of $\frac{1}{4}$ (1/m).

Test	Theoretical Value		Reference at the neutral conductor		Reference at the virtual point		Measurement at load terminals	
	K^- (%)	K^0 (%)	K^- (%)	K^0 (%)	K^- (%)	K^0 (%)	K^- (%)	K^0 (%)
1	15.92	0.00	15.92	0.00	15.92	0.00	15.92	0.00
2	19.49	8.02	19.49	8.02	19.49	2.01	19.49	8.02
3	10.00	0.00	10.00	0.00	10.00	0.00	10.00	0.00
4	0.00	10.00	0.00	10.00	0.00	2.50	0.00	10.00

Table 3. Unbalance factor calculated according to each type of measurement

7. Attenuation and recovery of the zero-sequence component

From the previous results it can be concluded that in case of three-phase four wire circuits and in the presence of zero-sequence components (fundamental or harmonic), there is a clear difference between the two voltage referential methods. Therefore, it is important to provide a careful analysis of the two methodologies and the differences found between them. Consider a set of three-phase and periodic voltage sources v_a , v_b e v_c , connected as in Fig. 8. In terms of symmetric components these voltages can be expressed as:

$$v_a = v_a^+ + v_a^- + v^0$$
$$v_b = v_b^+ + v_b^- + v^0$$
$$v_c = v_c^+ + v_c^- + v^0$$

(23)

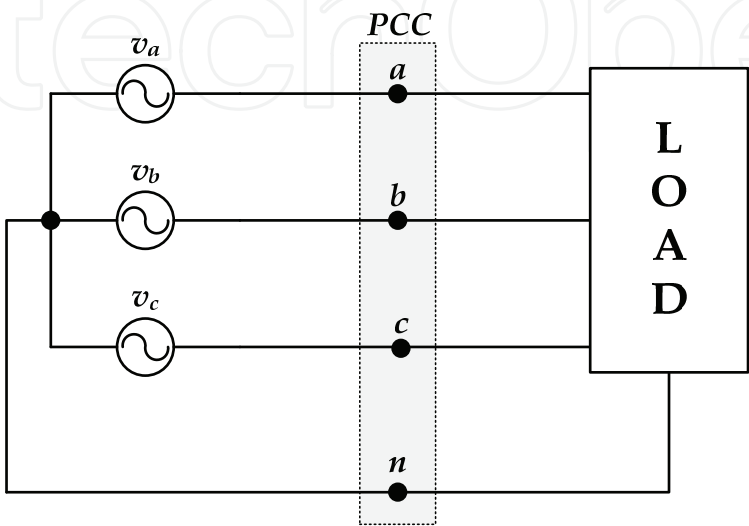


Fig. 8. Three-phase four-wire system

Considering the measurements with voltage reference at the neutral, Fig. 9 shows a circuit on which the neutral is utilized as the voltage reference, where R is the resistance of the voltage meter.

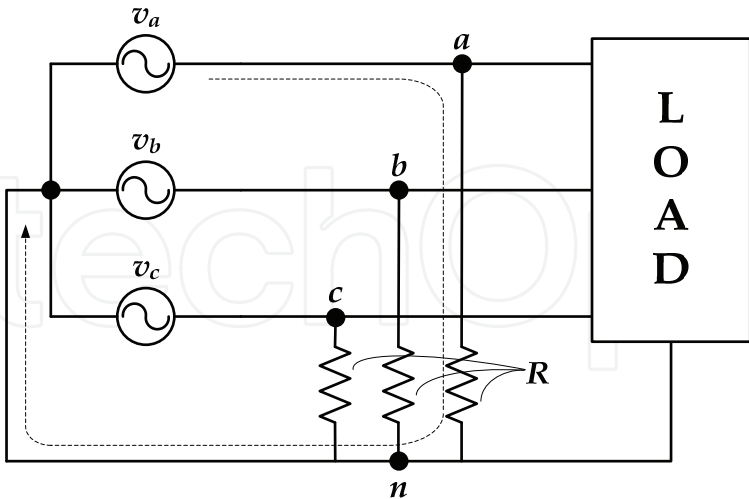


Fig. 9. Measurement topology considering the reference on the return conductor

Assuming that the value of R is much greater than the values of the load impedances, we can take into account only the links formed by the voltage sources and the measuring instruments, and substitute the voltages of the sources by their respective sequence components. Thus, the circuit of Figure 9 can be represented as in Fig. 10.

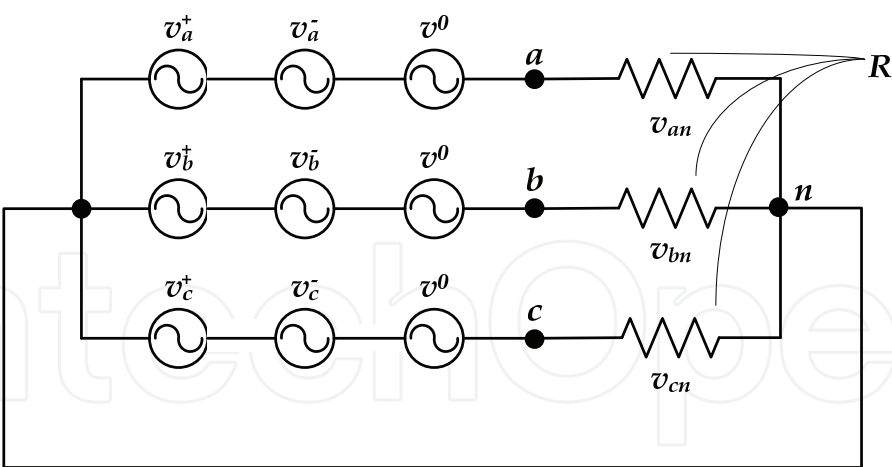


Fig. 10. Equivalent circuit for measuring to the neutral conductor

Since v_{an} , v_{bn} e v_{cn} are the voltage drops over each instrument's resistances, it follows that:

$$\begin{aligned} v_{an} &= v_a^+ + v_a^- + v^0 \\ v_{bn} &= v_b^+ + v_b^- + v^0 \\ v_{cn} &= v_c^+ + v_c^- + v^0 \end{aligned}$$

(24)

In this way, it can be seen that the measured voltages in relation to the neutral correspond to the imposed voltages by the source, containing all sequence components (positive, negative and zero), as it has been shown earlier in the sag, harmonics and unbalance tests. On the other hand, Fig. 11 shows a circuit on which the virtual point is used as the voltage referential. As in the circuit of Fig. 10, we can represent the circuit shown in Fig. 11 through its sequence components (Fig. 12).

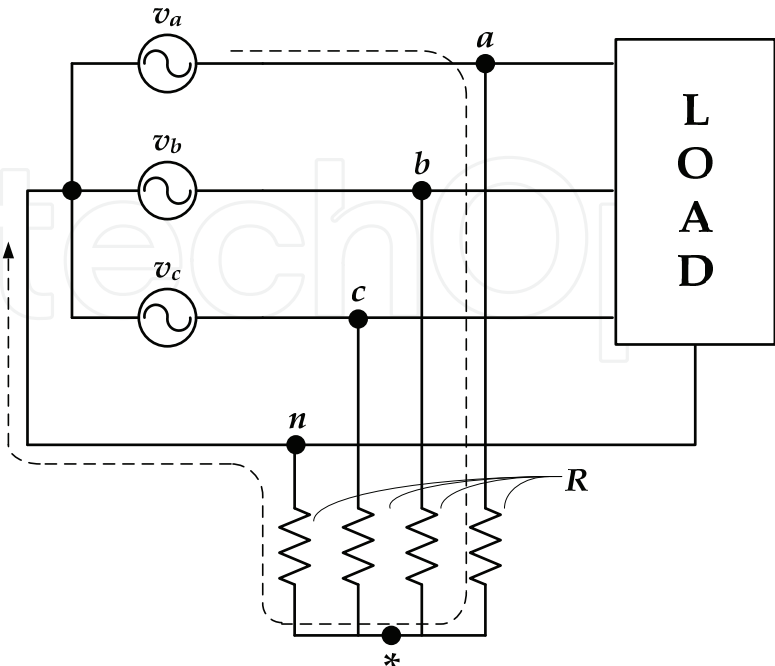


Fig. 11. Measurement topology considering the reference on the virtual point

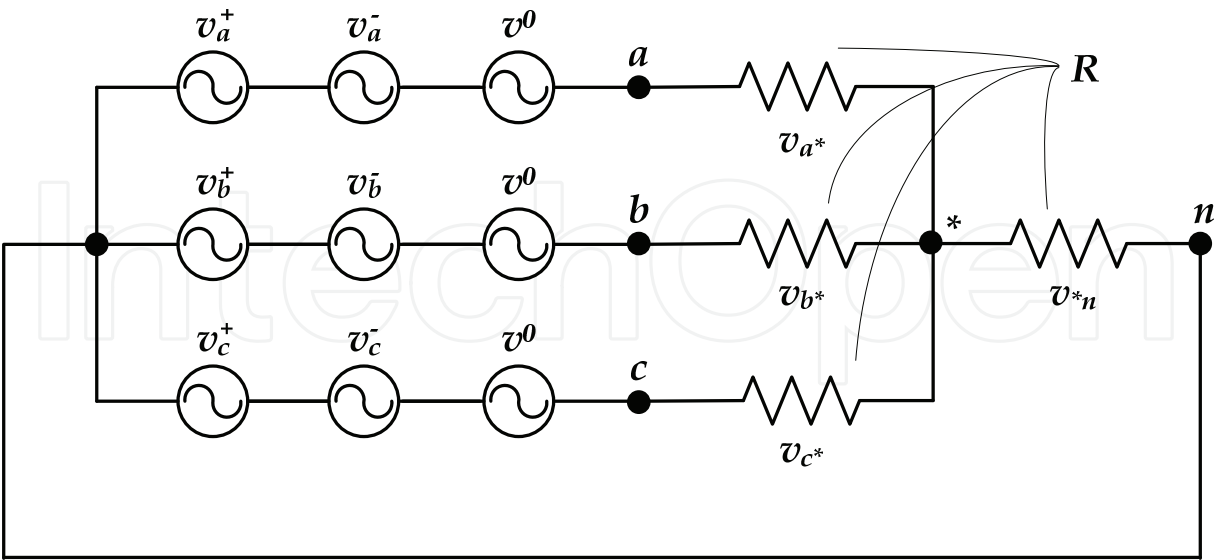


Fig. 12. Equivalent circuit for measuring to the virtual point

As it is known, the negative- and zero-sequence components are indicators of abnormal conditions (imbalances and/or harmonics) of an electric circuit. If we consider that the negative-sequence components "see" practically the same circuit as the positive-sequence components, the return (neutral) wire therefore is not necessary, as opposed to the zero-sequence current that only occurs in the presence of a return wire. In this way, if we consider the superposition theorem, we can decompose the circuit in Fig. 12 into a circuit containing positive- and negative- components (Fig. 13) and another circuit containing only zero-sequence components (Fig.14).

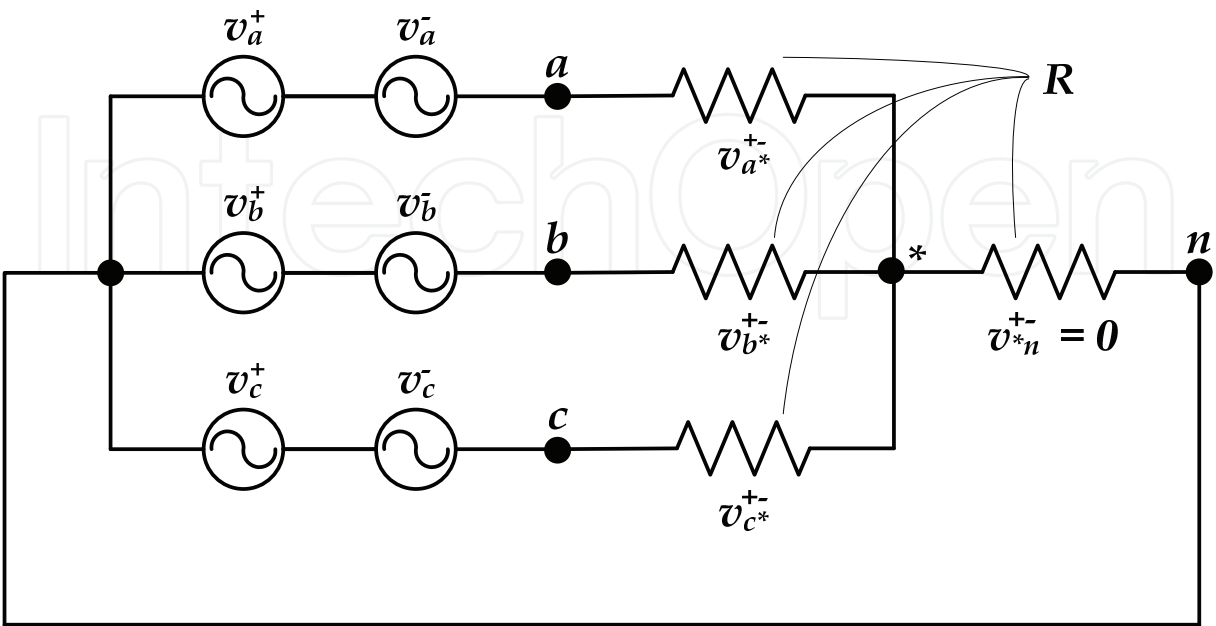


Fig. 13. Decomposition: positive- and negative-sequence circuit by superposition theorem

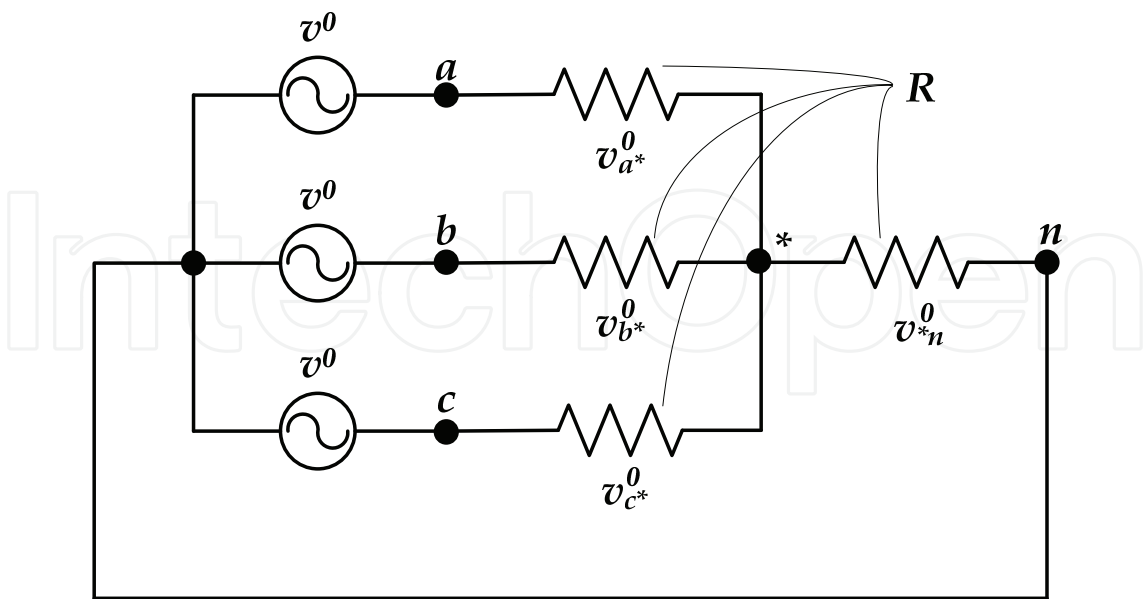


Fig. 14. Decomposition: zero-sequence circuit by superposition theorem

From the circuit in Fig. 13 we have the following:

$$\begin{aligned} v_{a*}^{\pm} &= v_a^+ + v_a^- \\ v_{b*}^{\pm} &= v_b^+ + v_b^- \\ v_{c*}^{\pm} &= v_c^+ + v_c^- \end{aligned} \tag{25}$$

According to the superposition theorem (Fig.13 and 14), the measured voltages to a virtual point can be written as:

$$\begin{aligned} v_{a*} &= v_{a*}^{\pm} + v_{a*}^0 \\ v_{b*} &= v_{b*}^{\pm} + v_{b*}^0 \\ v_{c*} &= v_{c*}^{\pm} + v_{c*}^0 \end{aligned} \tag{26}$$

On the other hand, Fig. 14 can also be represented by the circuit shown in Fig. 15, based on Blakesley transform (Blakesley, 1894).

Thus, for the circuit in Fig. 15 we can apply the voltage divider rule:

$$\begin{aligned} v_{a*}^0 &= v_{b*}^0 = v_{c*}^0 = \frac{R_{Eq}}{R_T} v^0 = \frac{1}{4} v^0 \\ v_{n*} &= \frac{R}{R_T} v^0 = -v_{*n} = -\frac{3}{4} v^0 \end{aligned} \tag{27}$$

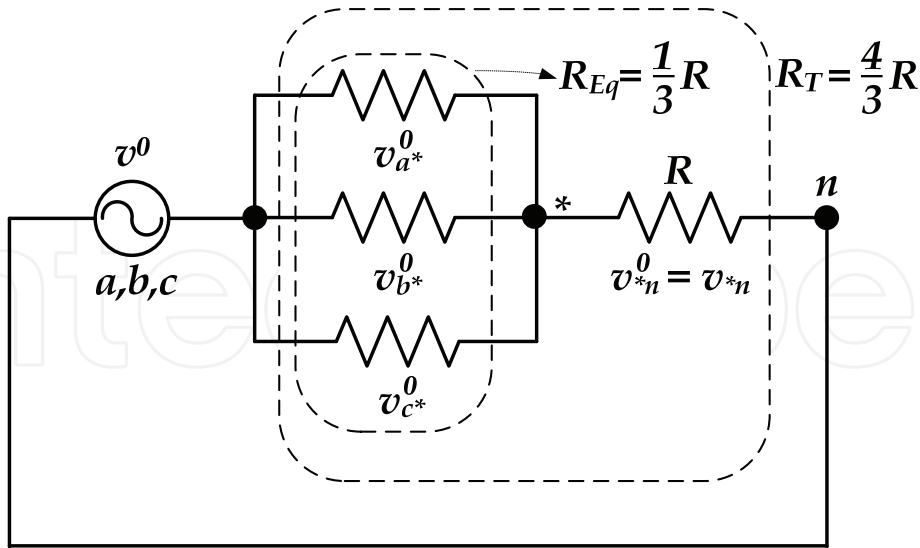


Fig. 15. Transformed Zero-sequence Circuits (Blakesley's theorem)

Equation (27) indicates the zero-sequence components of phase and neutral voltages regarding to the virtual point. In this way, the total voltages (measured to the virtual point), taking into account positive-, negative- and zero-sequence components, can be obtained by substituting (27) in (26):

$$\begin{aligned} v_{a*} &= v_a^+ + v_a^- + \frac{1}{4}v^0 \\ v_{b*} &= v_b^+ + v_b^- + \frac{1}{4}v^0 \\ v_{c*} &= v_c^+ + v_c^- + \frac{1}{4}v^0 \end{aligned} \tag{28}$$

Note that the zero sequence component is attenuated by a factor of $\frac{1}{4}$ of its real value, which means that for applications where its quantification is necessary, the measured value must be corrected. This can be done by adding $(\frac{3}{4}v^0)$ on both sides of the equation (29):

$$\begin{aligned} v_{a*} + \frac{3}{4}v^0 &= v_a^+ + v_a^- + v^0 \\ v_{b*} + \frac{3}{4}v^0 &= v_b^+ + v_b^- + v^0 \\ v_{c*} + \frac{3}{4}v^0 &= v_c^+ + v_c^- + v^0 \end{aligned} \tag{29}$$

From (31) we have:

$$\frac{3}{4}v^0 = -v_{n*} \tag{30}$$

Equation (30) finally provides the relationship between the measured voltage between the neutral and the virtual point and the zero-sequence component (homopolar). This equation allows us, to compare both measuring methodologies, as well as to provide algorithms for the measuring and monitoring equipments, which are correct, independently of the type of connection chosen by the end user.

Due to the differences in the apparent power, as indicated by (16) and (17), inclusion of equation (30) may be necessary in order to avoid miscalculation of the power terms and possible costumer's penalization.

8. Conclusions

It has been shown that in case of three-phase three-wire systems (without a return wire), both voltage references (neutral or virtual point) provide identical measurements due to the lack of homopolar components (zero-sequence), which are filtered by the topology of the system itself. However for return-wire systems, there is a need to take certain aspects into consideration, as for example, the attenuation of homopolar components (zero-sequence) if measuring the voltages to a virtual star point.

In this way, to measure voltage in modern installations with the presence of distortions and imbalances, the choice of a reference point must be made very carefully and its implications must be taken into account in applications such as pricing, measurement, power quality monitoring, compensation, protection, etc.

Despite of the demonstration of how to recover the homopolar components, attenuated by the virtual point measurements, the connection referenced to the neutral continues to be the best option, especially for low voltage applications, due to the fact that it needs less one measuring channel. However, considering applications in high-voltage systems (3 wires), the use of an external virtual point may be an interesting option, from the point of view of the protection of the measuring equipments.

Finally, it is worth pointing out that the proposed methodology to associate two methods for measuring voltages, by using Blakesley Theorem, can also be used in order to find a convergence point between the different power theories.

9. Acknowledgment

The authors gratefully acknowledge the CNPq and CAPES for the Financial support.

10. References

- Akagi, H. and Nabae A. (1993). The p-q Theory in Three-Phase Systems Under Non-Sinusoidal Conditions. *ETEP European Transaction on Electrical Power Engineering*. Vol. 3, No. 1, (January/February 1993), pp. 27-31.
- Blakesley T. H. (1894). A New Electrical Theorem. *Proceedings of the Physical Society of London*, Vol.13, pp. 65-67.
- Blondel A. (1893). Measurement of Energy of Polyphase currents. *Proceeding of. International Electrical Congress Chicago III*, pp. 112-117.
- Buchholtz, F. (1950). Das Bergiffsystem Rechtleistung, Wirkleistung, totale Blindleistung. Selbstverlag München, 1950.

- Czarnecki, L. S. (2008). Currents' Physical Components (CPC) Concept: A Fundamental of Power Theory. *Przegląd Elektrotechniczny (Electrical Review)*. Vol. 84, No. 6, pp. 28-37.
- Depenbrock, M. (1962). Untersuchungen über die Spannungs- und Leistungsverhältnisse bei Umrichtern ohne Energiespeicher. PhD Thesis, Technical University of Hannover, Germany.
- Depenbrock, M. (1979). Wirk- und Blindleistungen Periodischer Ströme in Ein- u. Mehrphasensystemen mit Periodischen Spannungen beliebiger Kurvenform. *ETG Fachberichte* No. 6, pp. 17-59.
- Depenbrock, M. (1993). The FBD-Method, a Generally Applicable Tool for Analyzing Power Relations. *IEEE Transaction on Power Systems*. Vol.8, No.2, (May 1993), pp. 381-387, ISSN 0885-8950.
- Depenbrock, M. (1998). Quantities of a MultiTerminal Circuit Determined on the Basis of Kirchhof's Laws, *ETEP European Transactions on Electrical Power*, Vol. 8, No. 4, pp. 249-257.
- Emanuel, A. E. (1998). The Buchholz-Goodhue Apparent Power Definition: The Practical Approach For Nonsinusoidal and Unbalanced Systems. *IEEE Transaction on Power Delivery*, Vol. 3, pp. 344-350, ISSN: 0885-8977.
- Emanuel, A. E. (2003). Reflections on the Effective Voltage Concept. *Proceedings of Sixth International Workshop on Power Definitions and Measurements under Non-sinusoidal Conditions*, pp. 1-8, Milano, Italy, October 13-25.
- Emanuel, A. E. (2004). Summary of IEEE Standard 1459: Definitions for the Measurement of Electric Power Quantities under Sinusoidal, Nonsinusoidal, Balanced or Unbalanced Conditions. *IEEE Transactions on Industry applications*. Vol. 40, No. 3, (May/June 2004), pp. 869-876, ISSN: 0093-9994.
- Ferrero, A. (1998). Definitions of Electrical Quantities Commonly Used in Nonsinusoidal Conditions. *ETEP European Transaction on Electrical Power Engineering*, Vol. 8, No. 4, (July/August 1998), pp. 235-240.
- Fryze, S. (1933). Wirk-, Blind- und Scheinleistung in Elektrischen Stromkreisen mit Nichtsinusförmigem Verlauf von Strom und Spannung" *Elektrotechnische Zeitschrift*. Vol. 53, No. 25, pp.596-599, 625-627, 700-702.
- IEEE Standard 1459 (2010). *IEE Standard Definitions for the Measurement of Electric Power Quantities under Sinusoidal, Non-sinusoidal, Balanced or Unbalanced Conditions*. ISSN 978-0-7381-6058-0, New York USA.
- Marafão F. P. (2004). Análise e Controle da Energia Elétrica Através de Técnicas de Processamento Digital de Sinais. PhD. Thesis, Universidade de Campinas (UNICAMP), Campinas, Brazil.
- Marafao, F. P. Liberado, E. V. Morales Paredes, H. K. and Pereira da Silva, L. C. (2010). Three-Phase Four-Wire Circuits Interpretation by means of Different Power Theories. *Proceedings of IEEE International School on Nonsinusoidal Currents and Compensation*, pp. 104-109, ISBN: 978-1-4244-5436-5, Poland, June, 2010.
- Moreira, A. C. Marafão, F. P. Deckmann, S. M. and Morales Paredes, H. K. (2006). Análise Comparativa das Técnicas de Medição de Potência Baseadas na Recomendação IEEE 1459-2000 e no Método FBD. *Proceedings of IEEE Industry Applications Conference*.

- Tenti, P. Mattavelli, P. and Morales Paredes, H. K. (2010). Conservative Power Theory, Sequence Components and Accounting in Smart Grids. *Przegląd Elektrotechniczny (Electrical Review)*. Vol. 86, No. 6, pp. 30-37, ISSN PL 0033-2097.
- Willems J. L. and Ghijselen J. A. (2003). The Choice of the Voltage Reference and the Generalization of the Apparent Power. *Proceedings of Sixth International Workshop on Power Definitions and Measurements under Non-sinusoidal Conditions*, pp. 9-18. Milano, Italy, October 13-25.
- Willems J. L. Ghijselen J. A. Emanuel A. E. (2005). The Apparent Power Concept and the IEEE Standard 1459-2000. *IEEE Transaction on Power Delivery*, Vol.20, No.2, pp. 876-884, ISSN 0885-8977.
- Willems, J. L. (2004). Reflections on Apparent Power and Power Factor in Non-sinusoidal and Poly-phase Situations. *IEEE Transaction on Power Delivery*. Vol 19, No.2, pp. 835-840, ISSN 0885-8977.

IntechOpen



Power Quality – Monitoring, Analysis and Enhancement

Edited by Dr. Ahmed Zobaa

ISBN 978-953-307-330-9

Hard cover, 364 pages

Publisher InTech

Published online 22, September, 2011

Published in print edition September, 2011

This book on power quality written by experts from industries and academics from various countries will be of great benefit to professionals, engineers and researchers. This book covers various aspects of power quality monitoring, analysis and power quality enhancement in transmission and distribution systems. Some of the key features of books are as follows: Wavelet and PCA to Power Quality Disturbance Classification applying a RBF Network; Power Quality Monitoring in a System with Distributed and Renewable Energy Sources; Signal Processing Application of Power Quality Monitoring; Pre-processing Tools and Intelligent Techniques for Power Quality Analysis; Single-Point Methods for Location of Distortion, Unbalance, Voltage Fluctuation and Dips Sources in a Power System; S-transform Based Novel Indices for Power Quality Disturbances; Load Balancing in a Three-Phase Network by Reactive Power Compensation; Compensation of Reactive Power and Sag Voltage using Superconducting Magnetic Energy Storage; Optimal Location and Control of Flexible Three Phase Shunt FACTS to Enhance Power Quality in Unbalanced Electrical Network; Performance of Modification of a Three Phase Dynamic Voltage Restorer (DVR) for Voltage Quality Improvement in Distribution System; Voltage Sag Mitigation by Network Reconfiguration; Intelligent Techniques for Power Quality Enhancement in Distribution Systems.

How to reference

In order to correctly reference this scholarly work, feel free to copy and paste the following:

Helmo K. Morales Paredes, Sigmar M. Deckmann, Luis C. Pereira da Silva and Fernando P. Marafão (2011). Selection of Voltage Referential from the Power Quality and Apparent Power Points of View, Power Quality – Monitoring, Analysis and Enhancement, Dr. Ahmed Zobaa (Ed.), ISBN: 978-953-307-330-9, InTech, Available from: <http://www.intechopen.com/books/power-quality-monitoring-analysis-and-enhancement/selection-of-voltage-referential-from-the-power-quality-and-apparent-power-points-of-view>

INTECH
open science | open minds

InTech Europe

University Campus STeP Ri
Slavka Krautzeka 83/A
51000 Rijeka, Croatia
Phone: +385 (51) 770 447
Fax: +385 (51) 686 166

InTech China

Unit 405, Office Block, Hotel Equatorial Shanghai
No.65, Yan An Road (West), Shanghai, 200040, China
中国上海市延安西路65号上海国际贵都大饭店办公楼405单元
Phone: +86-21-62489820
Fax: +86-21-62489821

www.intechopen.com

IntechOpen

IntechOpen

© 2011 The Author(s). Licensee IntechOpen. This chapter is distributed under the terms of the [Creative Commons Attribution-NonCommercial-ShareAlike-3.0 License](https://creativecommons.org/licenses/by-nc-sa/3.0/), which permits use, distribution and reproduction for non-commercial purposes, provided the original is properly cited and derivative works building on this content are distributed under the same license.

IntechOpen

IntechOpen